

# CHANGING ATTACHMENTS

Changing attachments on a Turf Teq Multi-Use machine is easy, it only requires a 3/4" socket and can be done in as little as 10 minutes. Although the process varies slightly depending on the attachment, the descriptions and photos below show how easy it is to make a switch!

1



Before starting consult your owner's manual, and then remove the attachment cover.

2



Remove the drive belt by releasing the tension lever. Some attachments include a pin to hold the tensioner open.

3



Slip the drive belt off of the engine, leaving the belt with the attachment. Each attachment includes its own belt.

4



Next, remove the steel H-Plate by removing the necessary cotter pin.

5



Use a 3/4" socket to remove the front nut. Loosen the rear bolt but don't remove it.

6



The machine will bow into two distinct parts, allowing you to back the tractor away from the attachment.


Attachments vary slightly, please consult your owner's manual for detailed instructions.

**TURFTEQ**

Learn More at [TURFTEQ.COM](http://TURFTEQ.COM)

# MULTI-USE TRACTOR & ATTACHMENT MODEL NUMBER CHART


**Multi-use Tractor**



**1305TR2** Multi-use Tractor  
Compatible with all attachments


**K1305DL** Differential Lock Kit  
**K1305WL** Wheel Lock Kit  
**K1305DL** Broom/Edger Lift Kit

**Power Rake Attachment**




**A1305P** Power Rake Attachment - AR Teeth  
**A1305P1** Power Rake Attachment - Carbide Teeth

**Power Edger Attachment**




**A1300E** Edger Groomer Attachment  
**A1300E1** Edger Groomer & Opener Attachment  
**A1300E2** Edger Opener Attachment

**Brush Cutter Attachment**

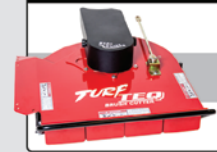


**A1305C** Brush Cutter Attachment

**Power Broom Attachment**



**A1300B** Broom Attachment - Poly Only  
**A1300B1** Broom Attachment - Poly-Wire 80%-20%  
**K1305DT** Dethatching Kit - Optional Kit  
Required for use on natural & synthetic turf

**Power Plow Attachment**

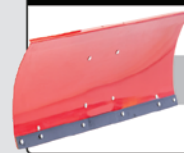


**A1305PL** Power Plow Attachment

## CONVERSION KITS REQUIRED FOR MULTI-USE APPLICATIONS


Conversion Kits	Edger to Broom 1305SP to 1305BR	Edger to PowerRake 1305SP to 1305PR	Broom to Edger 1305BR to 1305SP	Broom to PowerRake 1305BR to 1305PR	PowerRake to Edger 1305PR to 1305SP	PowerRake to Broom 1305PR to 1305BR
<b>K1305DL</b> Differential Lock	X	X				
<b>K1305WL</b> Wheel Lock	X	X	X		X	
<b>K1305LK</b> Broom/Edger Lift					X	X

## EDGER BLADE PROFILES


**16T - Bed Opening**

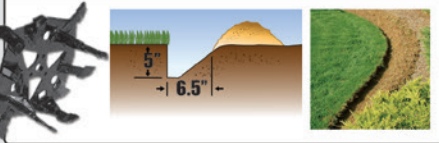


**T3 - Trenching 2" x 7"**

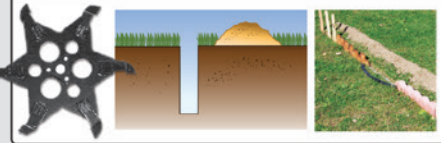


**T3N - Trenching .5" x 7"**

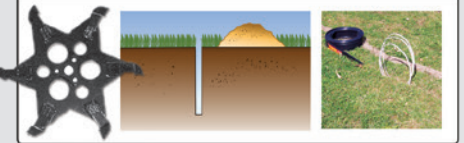


**T3W - Trenching 2.5" x 7"**

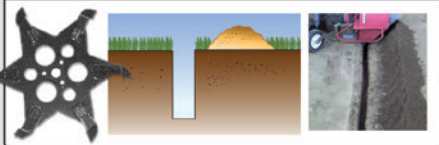

**T5 - Trenching 5" x 5"**

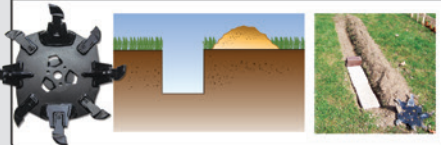


**16G - Bed Grooming**

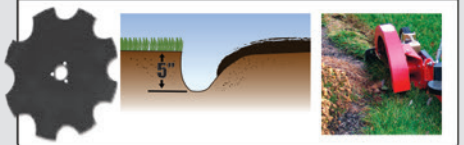

Model 1305 Only

**16S - Side Walk/Golf Cart Path**

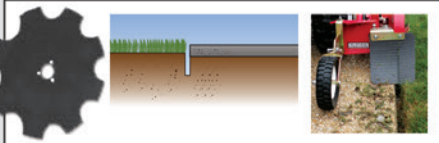

Model 1305 Only